


RE-23 - Radial Head

Component Parts Breakdown

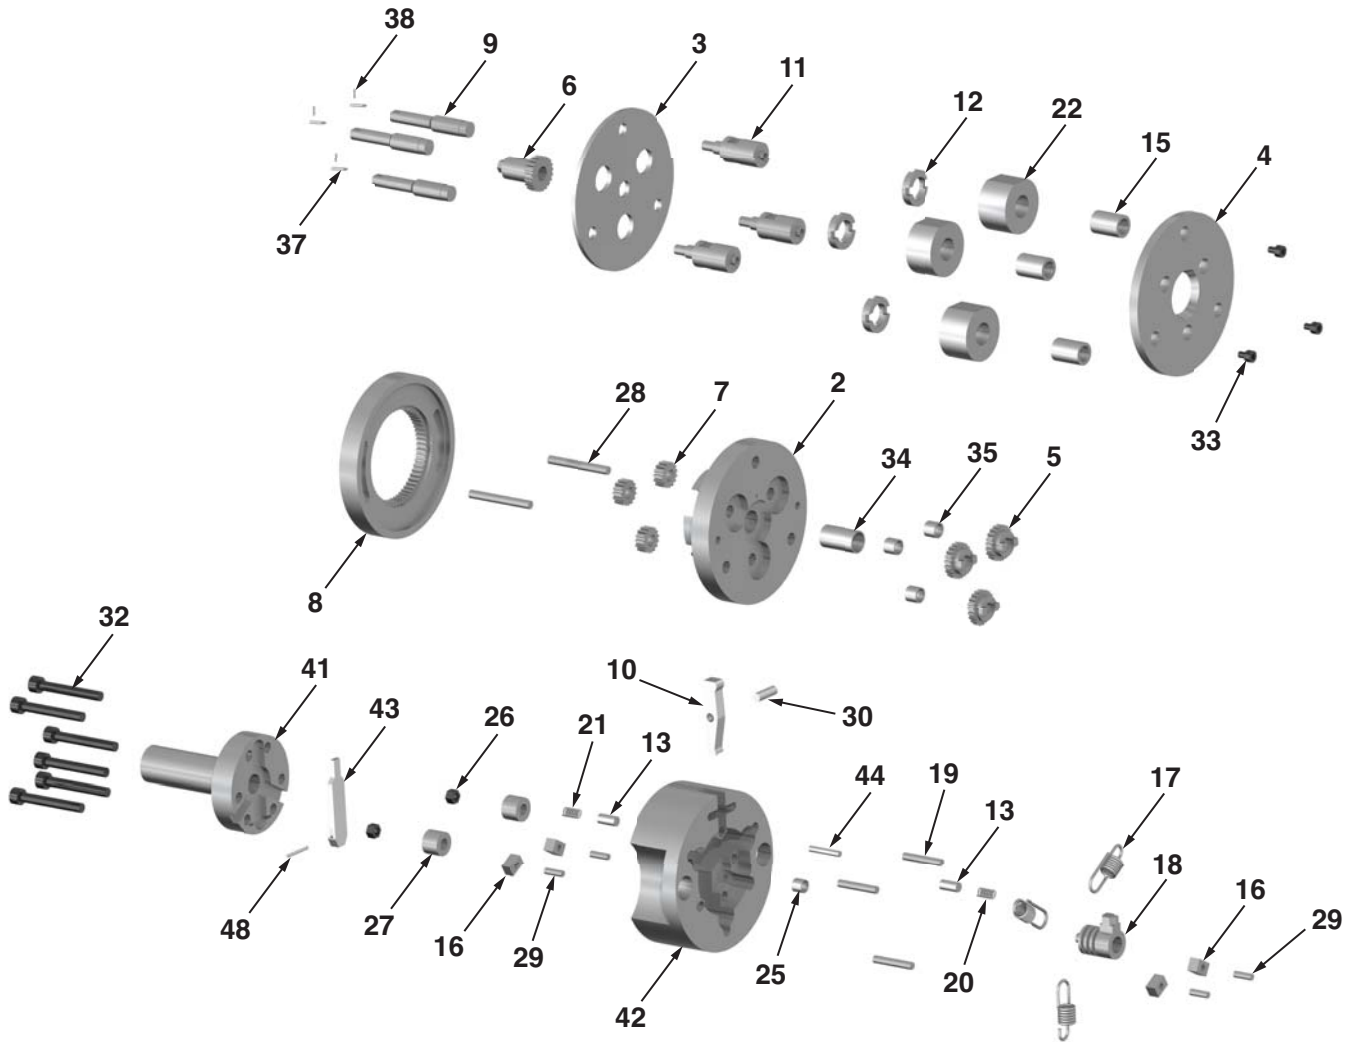

Ref	Qty	Description	EDP
2	1	Drive Gear Plate	23-002
3	1	Cover Plate	23-003
4	1	Front Plate	23-004
5	3	Synchronizing Gear w/Bushing	23-005
6	1	Center Gear	23-006
7	3	Adjusting Gear	23-007
8	1	Gear Rim	23-008
9	3	Eccentric Spindle	23-009
10	1	External Trip Release Lever	23-010
11	3	Spacer Pin	23-011
12	3	Drive Plate	23-012
13	2	Coupling Pin	23-013
15	3	Bushing	23-015

Ref	Qty	Description	EDP
16	4	Fitting Key	23-016
17	1	Tension Spring (3 pcs.)	23-017
18	1	Clutch Stop	23-018
19	3	Pin	23-019
20	1	Pressure Spring, Heavy	23-020
21	1	Pressure Spring, Light	23-021
22	3	Thread Roll (see chart for size and EDP)	
25	1	Bushing	16-025
26	2	Hex Nut	16-026
27	2	Washer	16-027
28	2	Stud	23-028
29	4	Pin	10-029
30	1	Pin	23-030

Ref	Qty	Description	EDP
32	6	Cap Screw	23-032
33	3	Cap Screw	23-033
34	1	Bushing	23-034
35	3	Bushing - see Item 5	23-035
37	3	Fitting Key	23-037
38	3	Pin	23-038
41	1	Shank 1-1/2	23-041
41A	1	Shank 2"	23-041A
41B	1	Shank 40mm	23-041B
41C	1	Shank 50mm	23-041C
42	1	Spring Housing	23-042
43	1	Internal Trip Release Lever	23-043
44	1	Pin	23-044
48	1	Pin	13-048



RSVP Tooling, Inc.

Toll Free: 888-289-7787 • Direct: 815-725-3310

Fax: 815-725-3391 • Email: sales@rsvptooling.com

www.rsvptooling.com