


RE-8 - Radial Head

Component Parts Breakdown

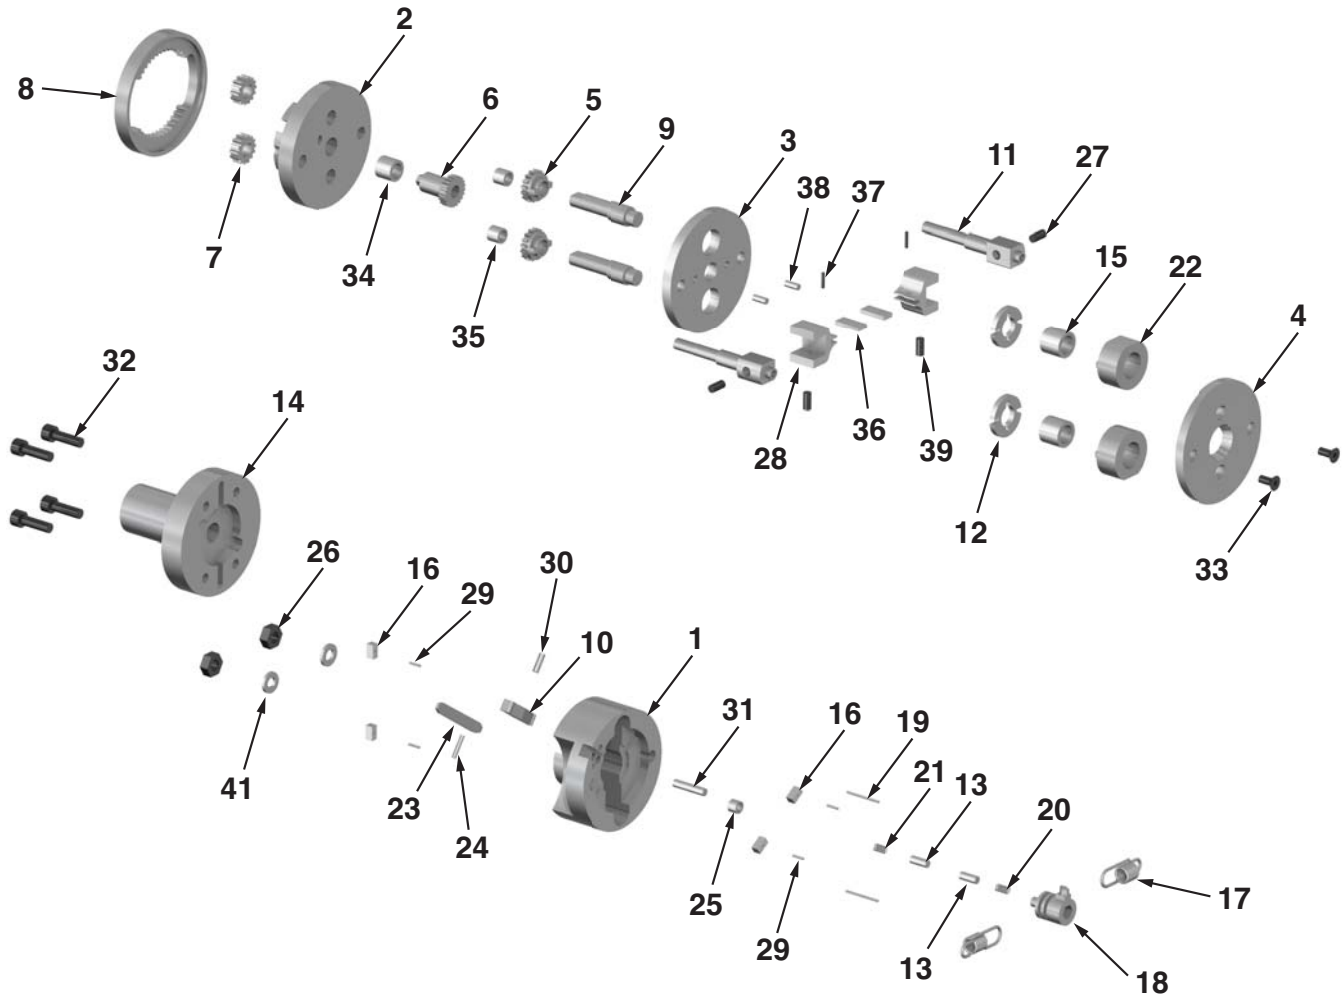

Ref	Qty	Description	EDP
1	1	Spring Housing	08-001
2	1	Drive Gear Plate	08-002
3	1	Cover Plate	08-003
4	1	Front Plate	08-004
5	2	Synchronizing Gear w/Bushing	08-005
6	1	Center Gear	08-006
7	2	Adjusting Gear	08-007
8	1	Gear Rim	08-008
9	2	Eccentric Spindle	08-009
10	1	External Trip Release Lever	08-010
11	2	Spacer Pin	08-011
12	2	Drive Plate	08-012
13	2	Coupling Pin	08-013
14	1	Shank 3/4	08-014
14A	1	Shank 1"	08-014A

Ref	Qty	Description	EDP
14B	1	Shank 1-1/4	08-014B
14C	1	Shank 20mm	08-014C
14D	1	Shank 25mm	08-014D
14E	1	Shank 30mm	08-014E
15	2	Bushing	08-015
16	4	Fitting Key	08-016
17	1	Tension Spring (2 pcs.)	08-017
18	1	Clutch Stop	08-018
19	2	Pin	08-019
20	1	Pressure Spring, Heavy	08-020
21	1	Pressure Spring, Light	08-021
22	2	Thread Roll (see chart for size and EDP)	
23	1	Internal Trip Release Lever	08-023
24	1	Pin	08-024
25	1	Bushing	08-025

Ref	Qty	Description	EDP
26	2	Hex Nut	08-026
27	2	Set Screw	08-027
28	2	Guide with Carbide Blade	08-028
29	4	Stud	08-029
30	1	Pin	08-030
31	1	Pin	08-031
32	4	Cap Screw	08-032
33	2	Cap Screw	08-033
34	1	Bushing	08-034
35	2	Bushing - see Item 5	08-035
36	2	Carbide Blade - see Item 28	08-036
37	2	Pin	08-037
38	2	Pin	08-038
39	2	Set Screw	08-039
41	2	Washer	08-041



RSVP Tooling, Inc.

Toll Free: 888-289-7787 • Direct: 815-725-3310

Fax: 815-725-3391 • Email: sales@rsvptooling.com

www.rsvptooling.com